


## > ROD KIT

### ASSEMBLY INSTRUCTIONS ROD KIT / SWIVEL KIT

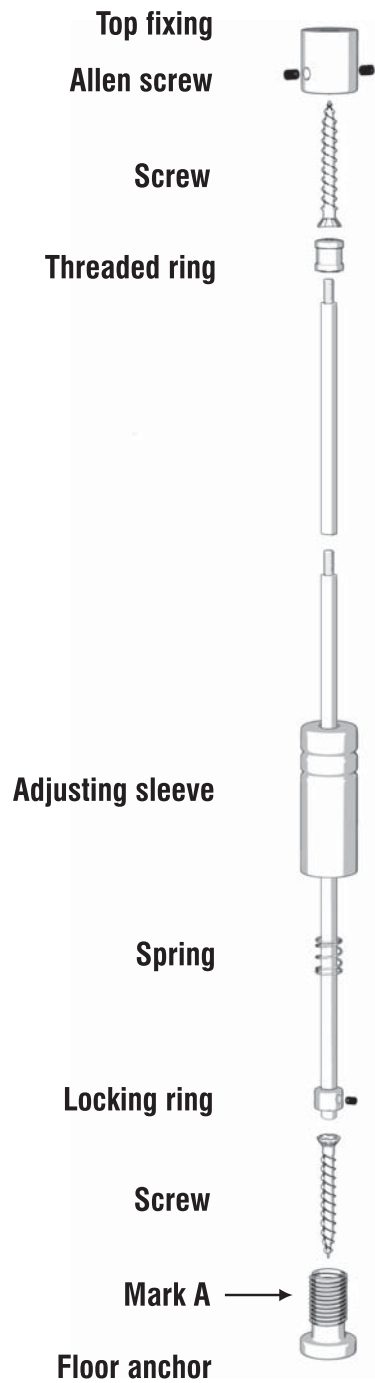

- 1) Fix the **Top boss** into ceiling using the provided **Screw**.
- 2) Screw the **Threaded ring** into the rod.
- 3) Insert the **Threaded ring** into the **Top boss**, then secure the two screws with the Allen key, to fix it into the **Top boss**.
- 4) Fix the **Floor anchor** (aligned with the Top boss) into the floor, using the provided **Screw**.
- 5) Place the rod manually close the **Floor anchor** and then cut it with a saw so it could reach halfway up to the **Floor anchor** (Mark A). Pass the rod through the **Adjusting sleeve**, the **Spring** and the **Locking ring**.
- 6) Leave 1/4 " clearance between the bottom of the lower **Locking ring** and the top **Floor anchor**, fix firmly the lower **Locking ring** with the provided screw.
- 7) Fix the **Adjusting sleeve** into the **Floor anchor** without over-tightening it.

In case of an assemblage on rails (ceiling and floor) use **2 rails fixings** instead of the screw provided with the rod kit.

