


> TOTEM

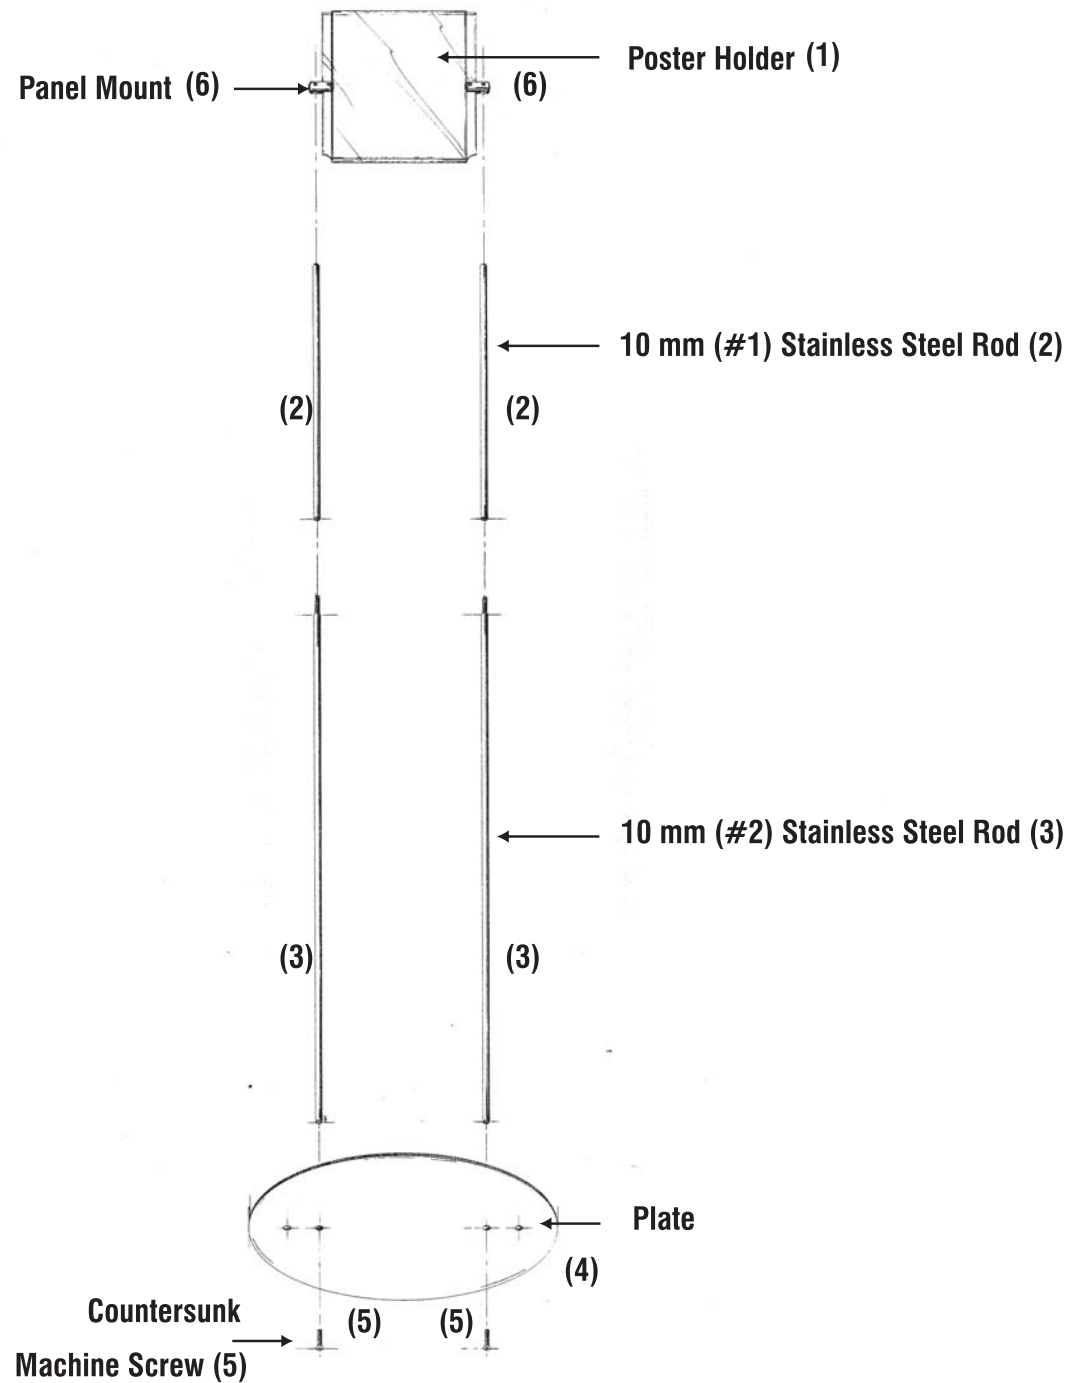

ASSEMBLY INSTRUCTIONS

TOTEM

- 1) By means of the **Countersunk Machine Screw (5)** attach **#2 Rods (3)** to **Plate (4)** and secure firmly
- 2) Attach **#1 Rods (2)** to **#2 Rods (3)** and tighten securely
- 3) Position **Panel Mounts (6)** on **Poster Holder (1)** and tighten **Allen Screws** on **Panel Mounts (6)**
- 4) Position **Panel Mounts (6)** onto **Rods (2 & 3)** at desired height and tighten **Allen Screws** on both **Panel Mounts (6)**